

# EXTERNAL DEBEADERS

## A simple and effective tool for removing external beads

The Fusion external debeader is easy to operate. All that is required is to set the debeader to the correct pipe diameter and then after the bead has cooled, simply locate the debeader on the bead and knock into position. Once the debeader's ratchet has been engaged, the debeader works its way round the bend until it has been fully removed.

## FEATURES

- Simple to use
- Easily adjusts to pipe diameter
- Does not scar the pipe
- Storage box
- Robust, hard working blades
- Replacement blades available
- National Grid approved

## Fusion's external debeader allows:

- Quality control procedures from visual bead inspection i.e. bend back test
- Quality assurance records i.e. archiving beads and data print-out for joint history
- Slip-lining of old pipes with polyethylene; the removal of the external bead allows a much closer fit

## SPECIFICATION

Product Code	Range	Weight
EXTDB	75-400mm	3kg
EXTDBL	800mm	4kg
EXTDBBLADE	Spare blade 75-400mm	40g

